



ITT

Industrial Process

Installation and Operation Manual

Switch Package 3 (SP3)



Engineered for life





Table of Contents

Introduction and Safety	2
Safety message levels.....	2
User health and safety.....	2
Transportation and storage	4
Handling and unpacking guidelines.....	4
Storage, disposal, and return requirements.....	4
Product Description	5
General description.....	5
Switch identification.....	5
Installation	6
Mount the switch package on the actuator.....	6
Operation	7
Switch operation guidelines.....	7
Maintenance	8
Assemble the switch package.....	8
Set the switch.....	8
Parts Listing and Cross-Sectional Drawings	10
Drawings and parts.....	10
Wiring diagrams.....	11

Introduction and Safety

Safety message levels

Definitions

Safety message level	Indication
 DANGER:	A hazardous situation which, if not avoided, will result in death or serious injury
 WARNING:	A hazardous situation which, if not avoided, could result in death or serious injury
 CAUTION:	A hazardous situation which, if not avoided, could result in minor or moderate injury
 Electrical Hazard:	The possibility of electrical risks if instructions are not followed in a proper manner
NOTICE:	<ul style="list-style-type: none"> • A potential situation which, if not avoided, could result in an undesirable result or state • A practice not related to personal injury

User health and safety

General precautions

This product is designed and manufactured using good workmanship and materials, and meets all applicable industry standards. This product should be used only as recommended by an IIT engineer.



WARNING:

- Misapplication of the valve can result in injury or property damage. Select valves and valve components of the proper materials and make sure that they are consistent with your specific performance requirements. Incorrect application of this product includes but is not limited to:
 - Exceeding the pressure or temperature rating
 - Failing to maintain this product according to the recommendations
 - Using this product to handle caustic or hazardous substances that it is not designed to handle

Qualifications and training

The personnel responsible for the assembly, operation, inspection, and maintenance of the valve must be appropriately qualified. The operating company must do the following tasks:

- Define the responsibilities and competency of all personnel handling this equipment.
- Provide instruction and training.
- Ensure that the contents of the operating instructions have been fully understood by the personnel.

Instruction and training can be carried out by either IIT or the reseller of the valve by order of the operating company.

Non-compliance risks

Failure to comply with all safety precautions can result in the following conditions:

- Death or serious injury due to electrical, mechanical, and chemical influences
- Environmental damage due to the leakage of dangerous materials

- Product damage
- Property damage
- Loss of all claims for damages

Operational safety precautions

Be aware of these safety precautions when operating this product:

- Do not leave hot or cold components of the product unsecured against contact if they are a source of danger.
- Do not remove the contact guard for moving parts when the product is in operation. Never operate the product without the contact guard installed.
- Do not hang items from the product. Any accessories must be firmly or permanently attached.
- Do not use the product as a step or hand hold.
- Do not paint over the identification tag, warnings, notices, or other identification marks associated with the product.

Maintenance safety precautions

Be aware of these safety precautions when performing maintenance on this product:

- You must decontaminate the product if it has been exposed to harmful substances such as caustic chemicals.
- You must immediately fit or reactivate all safety and protective equipment upon completion of work.

Use of unauthorized parts

Reconstruction or modification of the product is only permissible after consultation with ITT. Genuine spare parts and accessories authorized by ITT serve to maintain safety. Use of non-genuine ITT parts can annul liability of the manufacturer for the consequences. ITT parts are not to be used in conjunction with products not supplied by ITT as this improper use can annul all liability for the consequences.

Unacceptable modes of operation

The operational reliability of this product is only guaranteed when it is used as designated. The operating limits given on the identification tag and in the data sheet may not be exceeded under any circumstances. If the identification tag is missing or worn, contact ITT for specific instructions.

Transportation and storage

Handling and unpacking guidelines



CAUTION:

Always observe the applicable standards and regulations regarding the prevention of accidents when handling the product.

Handling guidelines

Follow these guidelines when handling the product to prevent damage:

- Use care when handling the product.
- Leave protective caps and covers on the product until installation.

Unpacking guidelines

Follow these guidelines when unpacking the product:

1. Inspect the package for damaged or missing items upon delivery.
2. Note any damaged or missing items on the receipt and freight bill.
3. If anything is out of order, file a claim with the shipping company.

Storage, disposal, and return requirements

Storage

If you are not immediately installing the product after delivery, store it as follows:

- Store the product in a dry room that maintains a constant temperature.
- Make sure that the products are not stacked on top of one another.

Disposal

Dispose of this product and associated components in compliance with federal, state, and local regulations.

Return

Ensure these requirements are met before you return a product to ITT:

- Contact ITT for specific instructions on how to return the product.
- Clean the valve of all hazardous material.
- Complete a Material Safety Data Sheet or Process Data Sheet for any process fluid that could remain on the valve.
- Obtain a Return Material Authorization from the factory.

Product Description

General description

The switch package is offered with a complete range of mechanical switches and proximity sensors to meet your electrical and control system specifications. The switch package can be mounted on the Advantage and Advantage Piston Actuator lines of pneumatic actuation.

Switch identification

Switch labels

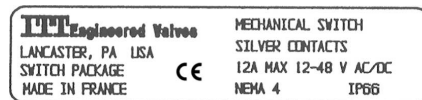


Figure 1: SP3S



Figure 2: SP3G

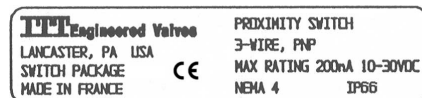


Figure 3: SP3P

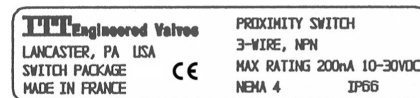


Figure 4: SP3NP

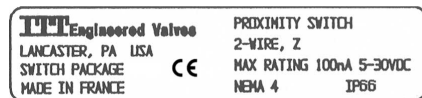


Figure 5: SP3Z

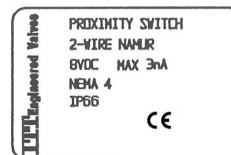


Figure 6: SP3N

Switch type

Code	Type	Description
SP3S	Mechanical	Silver contacts
SP3G	Mechanical	Gold contacts
SP3P	Proximity	3 wire PNP
SP3NP	Proximity	3 wire NPN
SP3Z	Proximity	2 wire "Z"
SP3N	Proximity	2 wire Namur

Installation

Mount the switch package on the actuator

1. Prepare the actuator for the switch:
 - a) Remove the four stainless steel screws on the actuator upper cover.
 - b) Place the valve in the open position.
 - c) Remove the plastic plug from the indicating spindle.
 2. Slide the switch sub-assembly off the switch adapter.
-

NOTICE:

Do not damage the switch internals (specifically the mechanical switch levers).

3. Slip the switch actuator spindle through the switch adapter until the #10-24 UNC threads are exposed.
 4. Apply Blue Loctite #242 to the #10-24 UNC threads.
 5. Thread the switch actuator spindle into the indicating spindle until it shoulders.
 6. Secure the switch adapter to the actuator upper cover by tightening the four hex socket head screws to 5 in-lbs (0.56 N-m).
 7. Slide the switch sub assembly down over the switch adapter and position the conduit entrance in the desired position.
-

NOTICE:

Do not damage the switch internals (specifically the mechanical switch levers).

8. Press down on the switch sub assembly and tighten the set screw located on the side of the lower housing to lock the unit in place.

The switch adapter has two molded counterbores. Locating the set screw in one of these holes provides maximum resistance to rotation.

The set screw torque should not exceed 5 in-lbs (0.56 N-m).
9. Remove the switch package upper cover.
10. Run field wires and conduit to the switch package.

For more information, see the Wiring diagrams in this manual.
11. Verify that the switches operate correctly by cycling the valve.

For more information, see Set the switch in this chapter.
12. Screw on the switch package upper cover.

Ensure the o-ring remains in the groove.

Operation

Switch operation guidelines

- The switch package is not autoclavable.
- Maximum switch temperature is 140°F (60°C).
- Switches and positioners cannot be used together.

Maintenance

Assemble the switch package

These instructions are for assembling the switch package after service or repair.

Ensure all o-rings are on the switch adapter and lubricated with Dow 111.

1. Slip the switch actuator spindle through the switch adapter until the #10-24 UNC threads are exposed.
2. Apply Blue Loctite #242 to the #10-24 UNC threads.
3. Thread the switch actuator spindle into the indicating spindle until it shoulders.
4. Secure the switch adapter to the actuator upper cover by tightening the four hex socket head screws to 5 in-lbs (0.56 N-m).
5. Thread the appropriate switch actuator(s) on to the switch actuator spindle.
6. Position the closed switch actuator approximately 0.14 in. (3.6 mm or 4 turns) from end of threads and position the open switch actuator approximately 0.25 in. (6.4 mm or 7 turns) below the top of the switch actuator spindle.

Do not tighten the set screw.

7. Remove the switch package upper cover.
8. Slide the switch sub-assembly down over the switch adapter and position the conduit entrance in the most desirable location.

NOTICE:

Do not damage the switch internals (specifically the mechanical switch levers).

-
9. Press down on the switch sub assembly and tighten the set screw located on the side of the lower housing to lock the unit in place.

The switch adapter has two molded counterbores. Locating the set screw in one of these holes provides maximum resistance to rotation.

The set screw torque should not exceed 5 in-lbs. (0.56 N-m).

10. Run field wires and conduit to the switch package.
For more information, see the Wiring diagrams in this manual.
11. Verify the switches operate correctly by cycling the valve.
For more information, see Set the switch in this chapter.
12. Screw on the switch package upper cover.
Ensure the o-ring remains in the groove.

Set the switch



CAUTION:

Do not short the inductive proximity switch by directly connecting a power supply. Irreparable and immediate damage can occur to the switch.

NOTICE:

The closed switch actuator must never hit the adapter in the closed position with the body attached.

The switch package is pre-set at the factory. Only minimal adjustment is required to adapt to the actuator.

1. Remove the switch package upper cover.
2. Verify that the switch package locking set screw is tight and the circuit board is firmly seated.
3. Place the valve in full open position.
4. Connect the appropriate test device to the open switch terminals.

Switch type	Test device
Mechanical	Traditional volt meter
Proximity	Inductive proximity tester (ex. Pepperl+Fuch's model #1-1305)
Inductive proximity	Energize with correct load and supply voltage

5. If the switch is mechanical, then press on top of the circuit board to move it toward the switch actuator.
6. Thread the upper switch actuator two turns past the initial switch indication and lock it in place with the set screw on the switch actuator.
7. Place the valve in the full closed position and connect the appropriate test device to the closed switch terminals.

Switch type	Test device
Mechanical	Traditional volt meter
Proximity	Inductive proximity tester (ex. Pepperl+Fuch's model #1-1305)
Inductive proximity	Energize with correct load and supply voltage

8. Thread the lower switch actuator two turns past the initial switch indication and lock it in place with the set screw on the switch actuator.
9. Replace the switch package upper cover.

Parts Listing and Cross-Sectional Drawings

Drawings and parts

List of parts

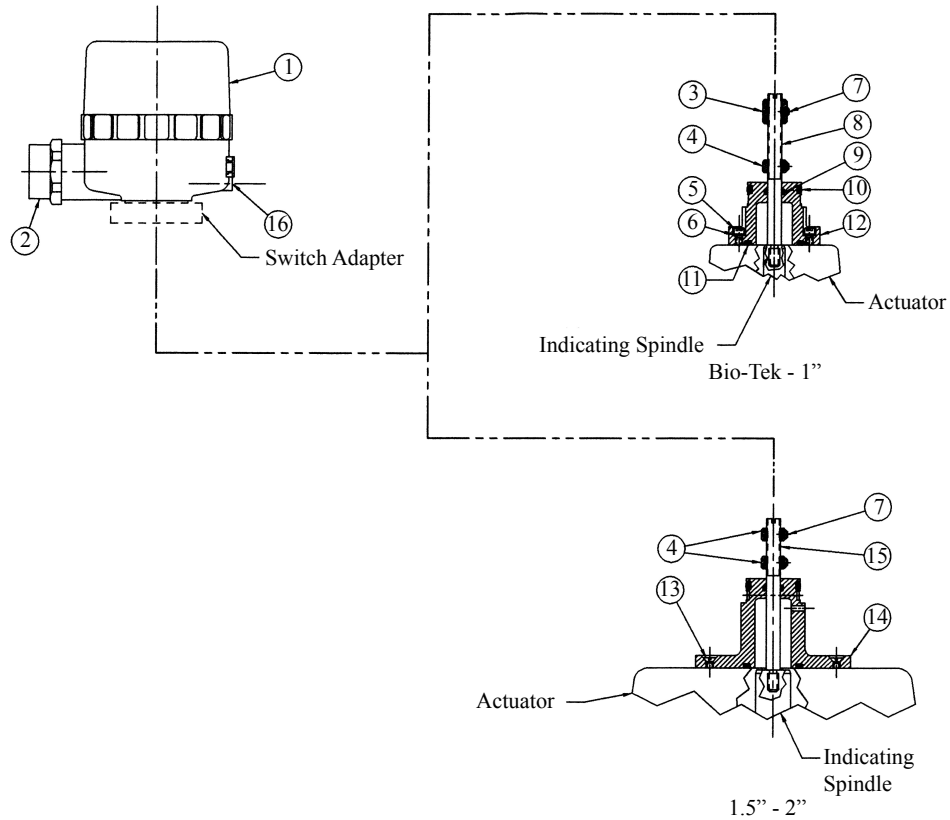


Figure 7:

Item	Description	Material	Quantity
1	Upper cover	Polysulfone	1
2	1/2 in. NPT adapter	Brass, nickel-plated	1
3	Switch actuator	Stainless steel	1
4	Switch actuator	Stainless steel	As required ¹
5	Hex socket head cap screw	Stainless steel	4
6	Lockwasher	Stainless steel	4
7	Set screw	Stainless steel	As required ²
8	Switch actuator spindle	Stainless steel	1
9	O-ring #010	Buna-N	1
10	O-ring #116	Buna-N	1
11	O-ring #117	Buna-N	1
12	Switch adapter	Polyarylsulfone	1
13	Hex socket flat head screw	Stainless steel	4
14	Switch adapter	Polyarylsulfone	1
15	Switch actuator spindle	Stainless steel	1

¹ One for Bio-Tek-1 in.

Two for 1.5-2 in.

² One per switch actuator

Item	Description	Material	Quantity
16	Set screw knurled cup point	Stainless steel	1

Wiring diagrams

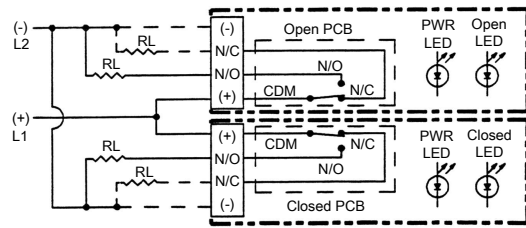


Figure 8: SP3S and SP3G wiring diagram

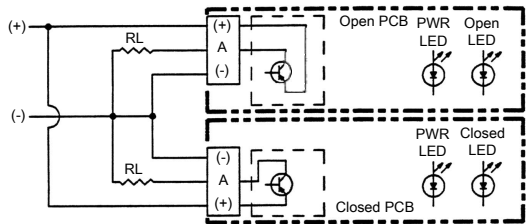


Figure 9: SP3P wiring diagram

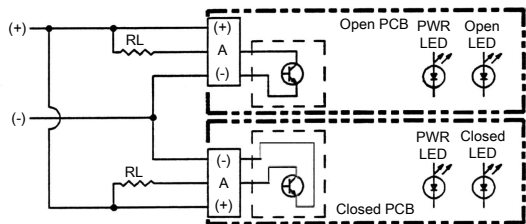


Figure 10: SP3NP wiring diagram

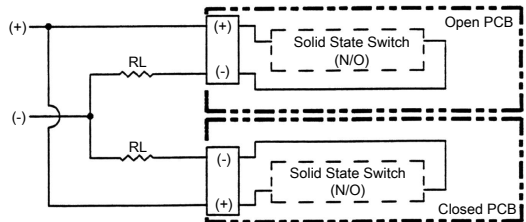


Figure 11: SP3Z wiring diagram

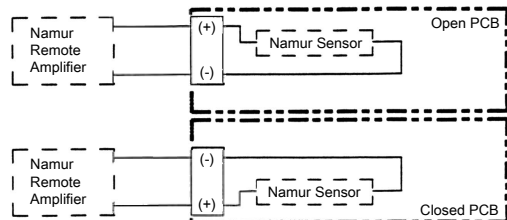


Figure 12: SP3N wiring diagram



ITT

Visit our Web site for the latest version of this document and more information
<http://www.ittpureflo.com>

ITT Pure-Flo
33 Centerville Raod
Lancaster, PA 17603
USA
Tel. +1-717-509-2200
Fax +1-717-509-2316
E-mail: pureflo.custserv@itt.com

ITT Pure-Flo
Richards Street, Kirkham
Lancashire PR4 2HU
England
Tel. +44-1772-682696
Fax +44-1772-686006