



Installation, Operation, and Maintenance Manual

33 PTA - Heavy Duty Push Through Valve



ITT

ENGINEERED FOR LIFE





Table of Contents

Introduction and Safety	2
Safety message levels	2
User health and safety	2
Transportation and storage	4
Handling and unpacking guidelines	4
Lift the valve	4
Storage, disposal, and return requirements	6
Product Description	7
General description	7
Installation	8
Preinstallation	8
Install the valve	9
Maintenance	11
Precautions	11
Inspection	11
Set the stroke	11
Replace the gate	12
Replace the seat	13
Troubleshooting	14
Knife gate valve operation troubleshooting	14
Parts Listing and Cross-Sectional Drawings	15
Drawing and parts list	15

Introduction and Safety

Safety message levels

Definitions

Safety message level	Indication
 DANGER:	A hazardous situation which, if not avoided, will result in death or serious injury
 WARNING:	A hazardous situation which, if not avoided, could result in death or serious injury
 CAUTION:	A hazardous situation which, if not avoided, could result in minor or moderate injury
 Electrical Hazard:	The possibility of electrical risks if instructions are not followed in a proper manner
NOTICE:	<ul style="list-style-type: none"> • A potential situation which, if not avoided, could result in an undesirable result or state • A practice not related to personal injury

User health and safety

General precautions

This product is designed and manufactured using good workmanship and materials, and meets all applicable industry standards. This product should be used only as recommended by an ITT engineer.



WARNING:

- Misapplication of the valve can result in injury or property damage. Select valves and valve components of the proper materials and make sure that they are consistent with your specific performance requirements. Incorrect application of this product includes but is not limited to:
 - Exceeding the pressure or temperature rating
 - Failing to maintain this product according to the recommendations
 - Using this product to contain or control media that is incompatible with the materials of construction
 - Proper containment or protection from hazardous media must be provided by the end user to protect employees and the environment from valve discharge.

Qualifications and training

The personnel responsible for the assembly, operation, inspection, and maintenance of the valve must be appropriately qualified. The operating company must do the following tasks:

- Define the responsibilities and competency of all personnel handling this equipment.
- Provide instruction and training.

- Ensure that the contents of the operating instructions have been fully understood by the personnel.

Instruction and training can be carried out by either ITT or the reseller of the valve by order of the operating company.

Non-compliance risks

Failure to comply with all safety precautions can result in the following conditions:

- Death or serious injury due to electrical, mechanical, and chemical influences
- Environmental damage due to the leakage of dangerous materials
- Product damage
- Property damage
- Loss of all claims for damages

Operational safety precautions

Be aware of these safety precautions when operating this product:

- Do not remove the contact guard for moving parts when the product is in operation. Never operate the product without the contact guard installed.
- Do not hang items from the product. Any accessories must be firmly or permanently attached.
- Do not use the product as a step or hand hold.
- Do not paint over the identification tag, warnings, notices, or other identification marks associated with the product.
- 33PTA is a discharging valve. Use of this product with media that would be hazardous to health or the environment must include safeguards appropriate for the release of the media. Splash containment options are available from ITT as accessories to this valve.
- When using accessories, such as chainwheels, to operate valves, please consult accessory manufacturer's instructions for safe operation.

Maintenance safety precautions

Be aware of these safety precautions when performing maintenance on this product:

- You must decontaminate the product if it has been exposed to harmful substances such as caustic chemicals.
- You must immediately fit or reactivate all safety and protective equipment upon completion of work.

Use of unauthorized parts

Reconstruction or modification of the product is only permissible after consultation with ITT. Genuine spare parts and accessories authorized by ITT serve to maintain safety. Use of non-genuine ITT parts can annul liability of the manufacturer for the consequences. ITT parts are not to be used in conjunction with products not supplied by ITT as this improper use can annul all liability for the consequences.

Unacceptable modes of operation

The operational reliability of this product is only guaranteed when it is used as designated. The operating limits given on the identification tag and in the data sheet may not be exceeded under any circumstances. If the identification tag is missing or worn, contact ITT for specific instructions.

Use of this product with media that is hazardous to health, safety, or the environment must be accompanied by applicable safety precautions to contain or protect personnel from valve discharge.

Do not use $\hat{M}M$ cheater bars $\hat{M}M$ to operate manual valves. Damage to the valve or personal injury could result.

Transportation and storage

Handling and unpacking guidelines



CAUTION:

Always observe the applicable standards and regulations regarding the prevention of accidents when handling the product.



WARNING: Valve shipped with thermal compensation system dis-engaged. Tighten valve bonnet per instruction manual prior to pressurizing the valve. For additional information go to www.engvalves/envizion.html or contact ITT at 717-509-2200.

Handling guidelines

Follow these guidelines when handling the product to prevent damage:

- Use care when handling the product.
- Leave protective caps and covers on the product until installation.

Unpacking guidelines

Follow these guidelines when unpacking the product:

1. Inspect the package for damaged or missing items upon delivery.
2. Note any damaged or missing items on the receipt and freight bill.
3. If anything is out of order, file a claim with the shipping company.

Lift the valve



WARNING:

Never tamper with the fasteners on the cylinder. Serious injury could result if the nuts on the cylinder tie rods are either tightened or loosened.



CAUTION:

- Personal injury or valve damage could occur if the valve is lifted by any part of the bevel gear assembly. The bevel gear assembly is not designed to support the weight of the valve.
- One person should not attempt to lift cylinder-operated valves larger than 6.00 in. (15.24 cm) or handwheel-operated valves larger than 12.00 in. (30.48 cm).
- Use lifting equipment rated for the weight of the valve assembly.
- Do not lift the valve by the handwheel.

1. Raise the valve into a vertical position.
To lift larger valves, loop a lifting strap around one of the yoke legs.
2. If the valve is handwheel-operated, then turn the handwheel so that one spoke is aligned perpendicular to the flow direction (or parallel with the gate).
3. Prepare the valve for lifting:

If your valve is...	Then...
Handwheel-operated	Loop the lifting strap under the yoke. Take care that the lifting strap does not bind or tighten against any part of the handwheel. Refer to the Handwheel-operated valve figure below.
Bevel gear-operated	Loop the lifting strap(s) under the yoke. Refer to the Bevel gear-operated valve figure below.

If your valve is...	Then...
Cylinder-operated	Attach two lifting eyes to the portion of the cylinder tie rods that extend above the top plate of the cylinder. Tie rod thread designations can be found in the Fabri-Valve GV Cylinder manual. Attach lifting hooks to the lifting eyes. Take care that all chains are free and not bound before you lift the valve. Refer to the Cylinder-operated valve figure below.

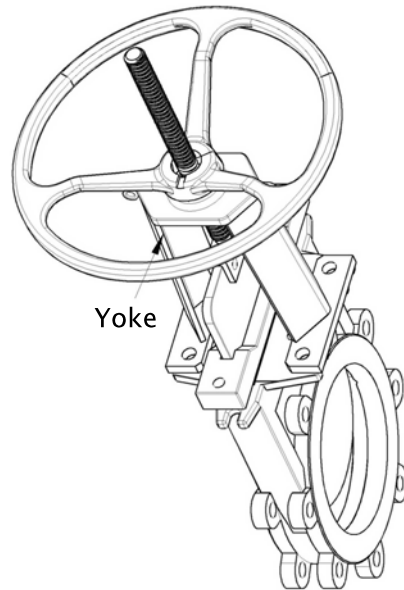


Figure 1: Handwheel-operated valve

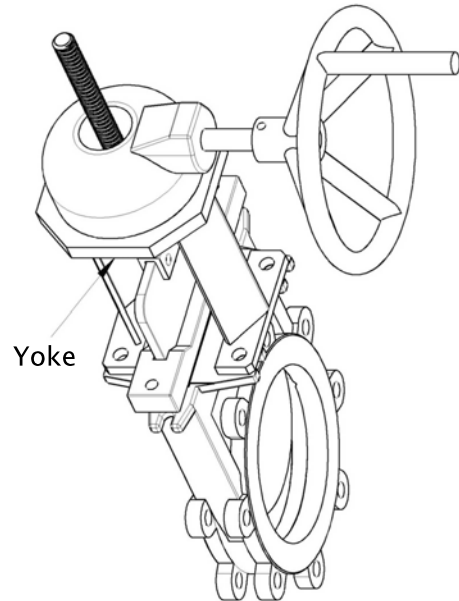


Figure 2: Bevel gear-operated valve

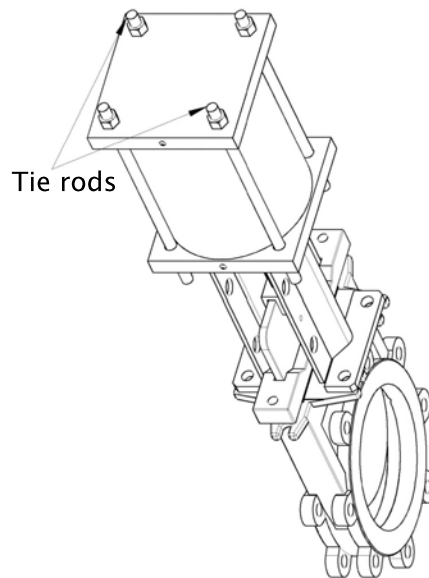


Figure 3: Cylinder-operated valve

4. Slowly take up the slack in the lifting straps to ensure that the straps are clear and not binding against the valve or valve top-works.



WARNING:
Do not adjust or remove the cylinder nuts. Cylinder failure may result from improperly tightened fasteners.

Storage, disposal, and return requirements

Storage

The package is designed to protect the valve only during shipping. If you are not installing the valve immediately after delivery, then you must store it according to these requirements.

- Do not expose the valve to direct sunlight.
- Do not expose the valve to weather conditions.
- Do not expose the valve to temperature extremes.
- Do not stack the valves on top of each other.
- Make sure the gate is in the full-open position.

Disposal

Dispose of this product and associated components in compliance with federal, state, and local regulations.

Return

Ensure these requirements are met before you return a product to ITT:

- Contact ITT for specific instructions on how to return the product.
- Clean the valve of all hazardous material.
- Complete a Material Safety Data Sheet or Process Data Sheet for any process fluid that could remain on the valve.
- Obtain a Return Material Authorization from the factory.

Product Description

General description

Design overview

The valve is a push-through style slurry valve that provides a robust solution for highly abrasive applications. This valve provides a continuous unrestricted rubber-lined flow path that is highly resistant to both abrasion and corrosion. Field replaceable rubber liners ensure minimal downtime for maintenance and repair.

Contact ITT to request a maintenance manual for another manufacturer's actuator, limit switch, positioner, controller, or other accessory.

Features

This valve has the following features:

- The valve discharges a small amount of process substances during cycling. This clears the seat and chest areas of any build-up every time the valve is operated.
- The valve guides the gate smoothly through every stroke and protects the valve body from media contact with a high-density polyethylene liner in the chest cavities of the valve.

Installation

Preinstallation

Precautions

NOTICE:

- Weld any flanges or pipelines before you install the valves. If this is impossible, protect the valve from excessive heat.
 - Remove all weld slag, rods, debris, and tools from the pipeline before valves are installed or cycled.
 - Always use studs in tapped holes to ensure full thread engagement of flange fasteners.
 - Do not over-tighten a machine bolt that has bottomed out. Valve damage may result, preventing proper operation.
 - Always use appropriate fasteners for the service, in compliance with applicable piping codes and standards.
 - Do not use the valve to draw together mating piping. Excessive stress induced by the pipeline may damage the valve.
 - Electrical, pneumatic, and hydraulic connections are to be made after the valve is installed in the pipeline.
-

Recommended fasteners

This table contains detailed information on the recommended fasteners for the valve.

Size, in (cm)	Size (DN)	Fastener diameter and thread	Total number of fasteners	Minimum bolt length, in (cm) ¹	Minimum stud length, in (cm)	Recommended Bolt Torque, ft-lb	Recommended Bolt Torque, n-m
3.00 (7.62)	80	5/8-11 UNC	8	2.5 (6.35)	4 (10.02)	40	50
4.00 (10.16)	100	5/8-11 UNC	16	2.5 (6.35)	4 (10.02)	40	50
6.00 (15.24)	150	3/4-10 UNC	16	2.5 (6.35)	4.5 (11.4)	70	95
8.00 (20.32)	200	3/4-10 UNC	16	3.0 (7.62)	4.625 (11.7)	70	95
10.00 (25.40)	250	7/8-9 UNC	24	3.0 (7.62)	5.125 (13.0)	115	155
12.00 (30.48)	300	7/8-9 UNC	24	4.0 (10.16)	6.5 (16.5)	115	155
14.00 (35.56)	350	1-8 UNC	24	4.5 (11.43)	7.25 (18.4)	170	230
16.00 (40.64)	400	1-8 UNC	32	4.5 (11.43)	7.5 (19.1)	170	230
18.00 (45.72)	450	1-1/8-7 UNC	32	5.5 (13.97)	8.375 (21.3)	240	320
20.00 (50.80)	500	1-1/8-7 UNC	40	5.5 (13.97)	8.625 (21.9)	240	320
24.00 (60.96)	600	1-1/4-7 UNC	40	6.0 (15.24)	9.375 (23.8)	350	470

Acceptable leakage

Discharge of process media from this valve during cycling is normal. Discharge from the valve should cease when the valve is fully opened or fully closed. You can contain and direct normal valve discharge with an optional splash guard.

Excessive leakage

There are no adjustments to be made on this valve if it is leaking. Refer to the Troubleshooting chapter for tips on handling a leaking valve.

¹ Type B standard washers are not included in the bolt or stud sizing. Flange thickness is from ANSI B16.5 class 150.

Install the valve

1. Weld slip on flanges flush to square cut pipe.
Valves 10" and above come with rubber coated sleeve retainer flanges pre-installed which serve as flange gaskets. This valve requires flat or raised face flanges in order to provide necessary support for the sleeves.

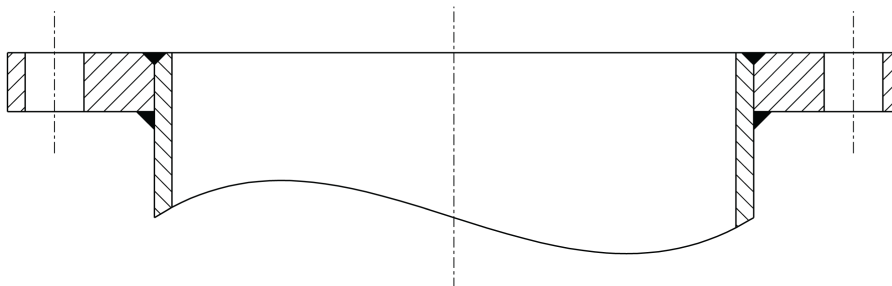


Figure 4: Correct (valve installed without sleeve retainers)


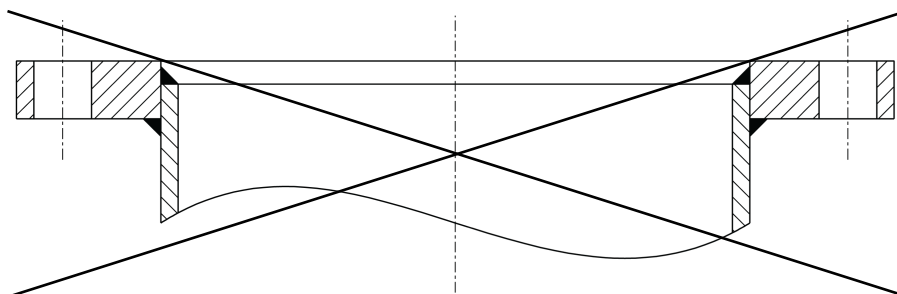


Figure 5: Incorrect (valve installed without sleeve retainers)

2. Place the valve in the open position.
This will reduce the interference of the seats with the mating flanges during installation.
3. If you install a valve with an actuator in a horizontal position, then you may need to support the actuator. Consult ITT for technical advice.
4. Bolt the valve to the mating flange using the proper size fasteners.
See the Recommended fasteners table in this section.
 - a) Lubricate stainless steel fasteners to prevent galling.
 - b) Adjust fastener length to adjust for mating flange thickness, gaskets, and support rings.
5. Tighten the flange bolts in an alternating sequence.
Torques are listed in the Recommended Fasteners table in [Preinstallation](#) (page 8)

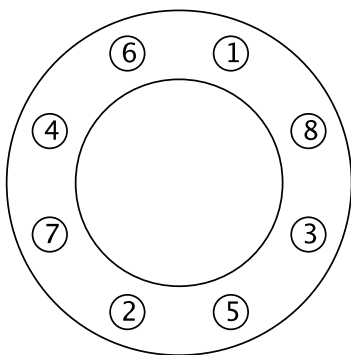

6. Prepare the valve for hydrotesting:

If your valve is ...	Then ...
Handwheel-operated or Bevel gear-operated	Requires no further action
Air Cylinder-operated	Connect control air supply to the air cylinder (standard configured valve required pressure is 60–100 psi)

If your valve is ...	Then ...
Hydraulic Cylinder-operated	Connect control hydraulic supply to the hydraulic cylinder (standard configured valve required pressure is 600–1000 psi)
Electric-operated	Connect electric supply according to manufacturers instructions

7. Hydrotest the system.
8. If the valve is leaking, then replace the seat.
For more information, see [Replace the seat](#) (page 13)

Maintenance

Precautions



WARNING:

- All procedures must be performed by qualified personnel.
 - When the process fluid is hazardous, thermal (hot or cold), or corrosive, take extra precautions. Employ the appropriate safety devices and be prepared to control a process media leak.
 - Always wear protective clothing and equipment to safeguard the eyes, face, hands, skin, and lungs from the particular fluid in the line.
 - Do not attempt any maintenance on the valve without locking out the power source of the valve actuation. Serious injury could result.
-



CAUTION:

- Disconnect electrical, pneumatic, and hydraulic power before performing any maintenance activities on this valve or on the actuation.
-

NOTICE:

Make sure that travel limits are set for both open and closed positions on electrically operated valves.

Inspection


Inspection area	What to look for	Action if problem is found
External valve parts	Excessive wear or corrosion	<ul style="list-style-type: none"> • Replace the affected parts • Contact ITT to obtain replacement parts or for specific instructions

Set the stroke

Set the stroke for handwheel or bevel gear actuated valves.

1. Screw the stop nut to the top of the stem assembly.
2. Close the valve.

3. Measure distance “A” which is from the top of the gate to the top of the body.

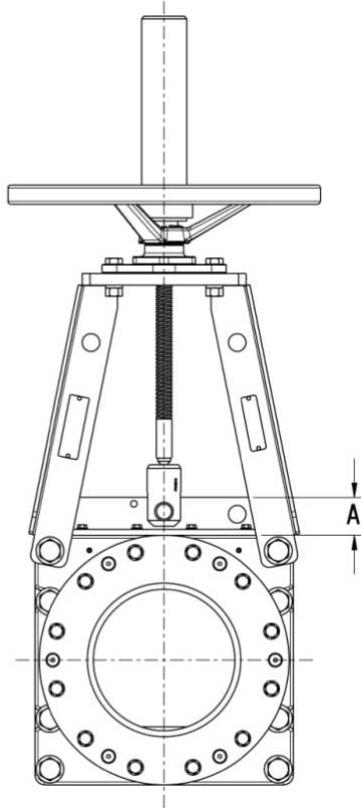

4. Adjust the stop nut.

If distance “A” is	Then
Shorter than the stroke distance	Adjust the stop nut up until “A” is within 1/8 in. (3 mm) of the stroke distance.
Longer than the stroke distance	Adjust the stop nut down until “A” is within 1/8 in. (3 mm) of the stroke distance.

Table 1: Stroke distance

Valve size Inches	Distance	
	mm	
3	1.55	39
4	1.49	38
6	1.50	38
8	1.86	47
10	2.41	61
12	2.29	58
14	2.54	65
16	3.12	79
18	3.19	81
20	3.07	78
24	3.76	96

Replace the gate

This valve is designed to allow replacement of the gate without removing the valve from service.


1. Ensure that the valve is in the open position.
2. Disconnect the actuator from the energy source.

3. Support the weight of the actuator using lifting eyes or a strap.
4. Remove the bolts securing the actuator or handwheel adapter.

NOTICE:

Do not pressurize the valve if any of the yoke bolts or body bolts are removed.

5. Lift the gate from the valve along with the actuator or handwheel.

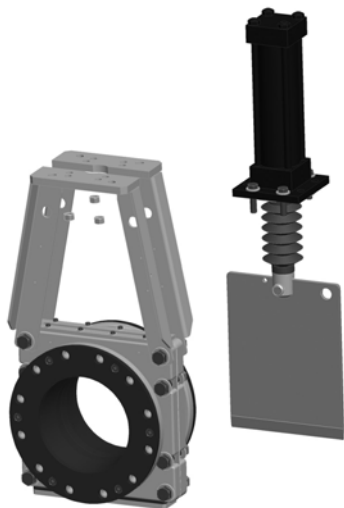

6. Replace the gate.
7. Reassemble the valve and actuator.

Replace the seat

1. Isolate the valve from service.
2. Place the valve in the fully open position.
3. Remove the entire valve from the pipeline.
4. Remove the seats and seat retainers (if supplied) from the outside of the valve. There is no need to disassemble the valve body.
5. Examine the leading edge of the gate for burrs or marring that could damage the seats.
6. If the gate is damaged, remove and repair the gate. For more information, see [Replace the gate](#) (page 12).
7. Lubricate the seat with silicone lubricant as shown below.



For more information, see (page).

8. Lubricate the leading edge of the gate with silicone lubricant. For more information, see (page).

Troubleshooting


Knife gate valve operation troubleshooting

Symptom	Cause	Remedy
The fully-opened or fully-closed valve is leaking.	The upstream seat may be damaged.	Replace the seat with a genuine ITT replacement seat.
Excessive force is required to open and close the valve.	The valve is not lubricated properly.	See Lubrication requirements in the Maintenance section.

Parts Listing and Cross-Sectional Drawings

Drawing and parts list

Pneumatically actuated

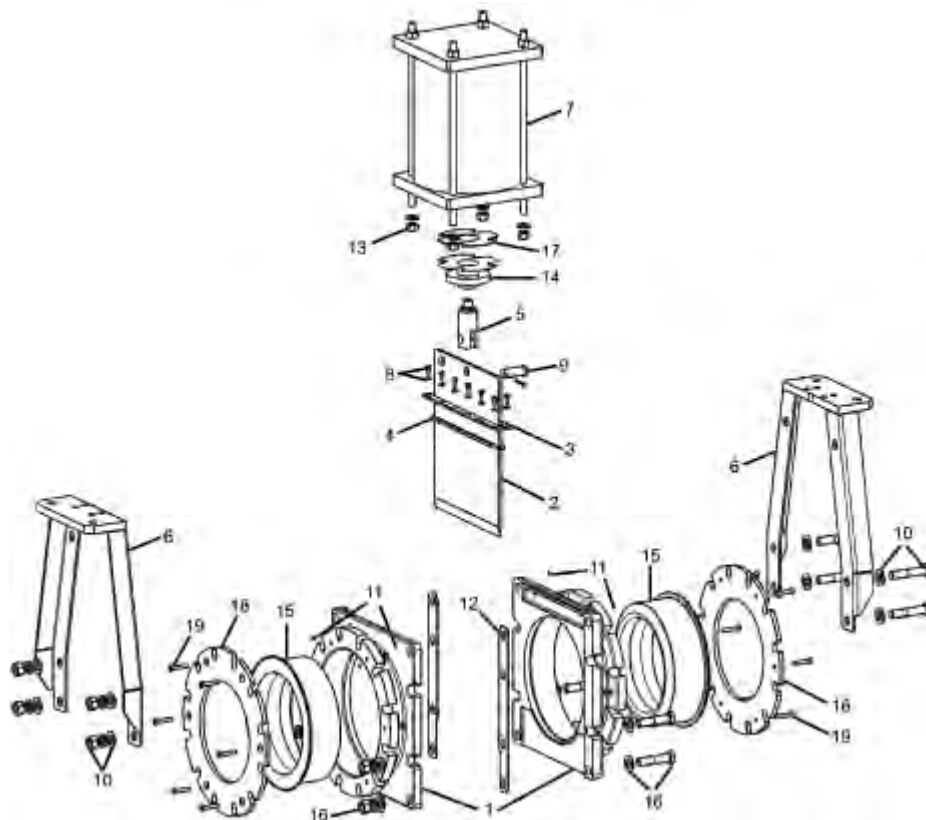


List of parts

Item	Description	Standard Material	Quantity
1	Body	Ductile Iron	2
2	Gate	316 Stainless steel	1
3	Packing gland	Mild steel	1
4 ²	Packing	Acrylic	As required
5	Gate clamp	Mild steel	1
6	Yoke	Mild steel	2
7	Pneumatic actuator	As required	1
8	Packing gland fasteners	Plated steel	As required
9	Gate fasteners	Plated steel	1
10	Yoke fasteners	Plated steel	As required
11	Grease fitting	Plated steel	4
12	Body spacer	Mild steel	2
13	Actuator fasteners	Plated steel	4
14	Rod boot	Nylon	1
15 ²	Seat	Natural rubber	2
16	Body fasteners	Plated steel	As required
17	Rod boot support plate	Stainless steel	1

² Recommended spare part

Item	Description	Standard Material	Quantity
18	Seat retainer	Mild steel and natural rubber	2
19	Seat retainer fasteners	Plated steel	As required

Handwheel actuated

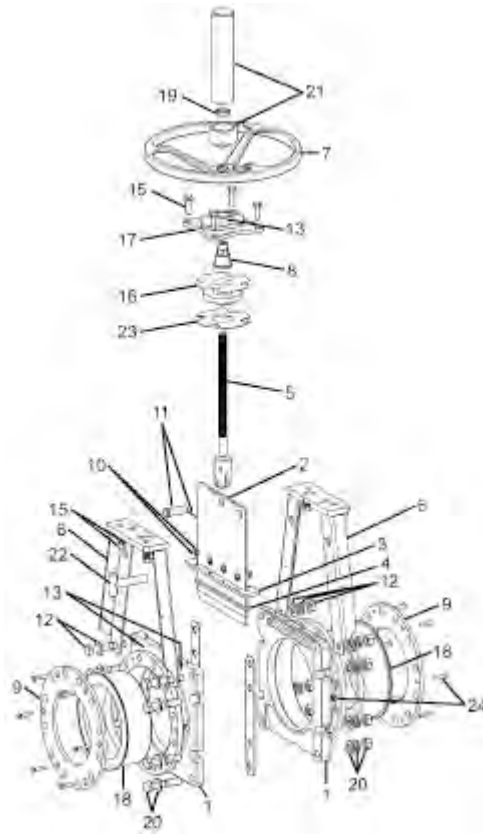

List of parts

Item	Description	Standard material	Quantity
1	Body	Ductile iron	2
2 ²	Gate	316 SS	1
3	Packing gland	Mild steel	1
4 ²	Packing	Acrylic silicone	1
5	Stem assembly	304 SS	1
6	Yoke	Mild steel	2
7	Handwheel	Ductile iron	1
8	Stem nut	Bronze	1
9	Seat retainer	Rubber / mild steel	2
10	Packing gland fasteners	Plated steel	As required
11	Gate fasteners	304 SS	1
12	Yoke fasteners	Plated steel	As required
13	Grease fitting	Plated steel	As required
14	Body spacer	Stainless steel	2
15	Yoke hub fasteners	Plated steel	4
16	Rod boot	Nylon	1
17	Yoke hub	Mild steel	1
18	Seat	Rubber / mild steel	2
19	Stop nut	Carbon steel	1
20	Body fasteners	Stainless steel / plated steel	As required

Item	Description	Standard material	Quantity
21	Stem cover	Mild steel	1
22	Lock pin	17âM M 4 SS	1
23	Rod boot spacer plate	Stainless steel	1
24	Seat retainer fasteners	Stainless steel	as required

Visit our website for the latest version of this document and more information:

www.engvalves.com



ENGINEERED FOR LIFE

Engineered Valves
1110 Bankhead Avenue
Amory, MS 38821
USA
Tel. +1-662-256-7185
Fax +1-662-256-7932
E-mail: engvalves.custserv@itt.com

ITT Brasil
Estrada Velha Itu-Salto km 40.4
Salto 13324-195
Sao Paulo
Tel. 55-11 4602 9200
Fax 55-11 4602 9215
E-mail: vendas.sp@itt.com